



How To Read a Barcode (Code 3 of 9) TIP 5163



The narrow bars are 0s, the wide bars are 1s, and each wide space is transcribed as "-".
The barcode above would be transcribed as:

0-011010-00101-00111-00000-10110-10001-10000-01110-01001-0100-0110

Now the code must be broken down into five-digit sections as follows:

0-0110 10-001 01-001 11-000 00-101 10-100 01-100 00-011 10-010 01-010 0-0110

Each five-digit section is a code in the list that follows.

0	00-110
1	10-001
2	01-001
3	11-000
4	00-101
5	10-100
6	01-100
7	00-011
8	10-010
9	01-010
*	0-0110 starting and ending digit (ignore)